



Setting up your Sportsman 24 Hour Bait Shop

Understanding your new vendor

QUICK START GUIDE

WELCOME

We thank you very much for purchasing your Sportsman 24 Hour Bait Shop

This quick start guide is a program that was put together to help you set up and get familiar with your new Sportsman 24 Hour Bait Shop. It in no way is this program to take the place of your service manual or the programming guide. Please take the time and read both the service manual and programming guide. Doing so will help you get the most from your new investment.



When your vendor arrives

Your new Sportsman was carefully crated at the factory to ensure that no damage occurs during transport. That being said, damage can still take place during transport. It is very important to carefully inspect the vendor before signing the shipping documents. If there is any damage make sure that the damage is noted on all copies of the shipping papers. Make sure the driver initials the papers as well. If there is serious damage do not sign the bills and call us right away, we may have you refuse the shipment.

Next you will need to remove the shipping boards from the bottom of the machine. You will see splits in the front and back of these boards. Take a crow bar and place the end of crow bar in the splits and the boards will split apart.

Your Sportsman is now ADA Compliant

While making these changes we decided to add some nice new features, these are listed below

The "Best" just got better!!

ADA compliant plus added security

The only bait vendor on the market today engineered from the ground up for outdoor use

Reel In The Profits

Open 24 Hours –
Never Miss A Sale

New Lexan cover

New high security lock
cover

The New ADA SPORTSMAN




**3/8 LEXAN/POLYCARBONATE
SECURITY FRONT**

**New angled rain
guard**

High security lock

**Redesigned monetary
area to ADA height
requirements**

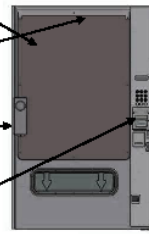

Dispenses a wide variety
of fishing products including
LIVE BAIT!

Accepts Cash, Credit & Debit

Guaranteed Delivery
Sensor System

Built in the USA!

Eye Catching Graphics

High Security - Built for
Outdoor Use

Alarm System

Financing Available

For more information contact:

Gary Harsel
PA Live Bait Vending
2641 Creek Road
Elverson, PA 19520
Ph: 610-942-2185,
Mobil: 484-885-4602
garyharsel@gmail.com


www.livebaitvending.com



Opening your Sportsman

Your key will be taped in the coin return tray. Open door by turning key in lock and lifting lever after you turned the key. Please note: The lock provided with the machine is a shipping lock. This lock should be replaced with your own lock before putting on location and operating.

After opening the unit look inside the delivery bin remove all internal packing material and remove the power cord. Now go to the rear of the machine and remove the metal plate located at the lower left side of machine, plug the cord into the vendor and fasten plate back on the machine. Now plug the vendor in a standard 110 outlet. Make sure that is no other vending machine or ice machine on the circuit.

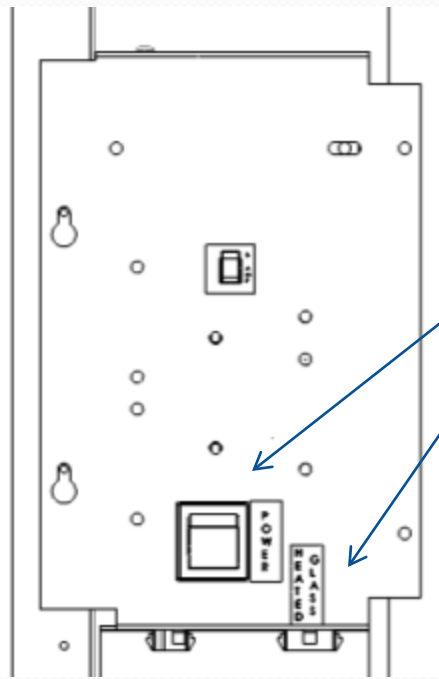

Main Power Switch
Door Glass Heater Connection

MAIN POWER SWITCH

Plug the power cord into a dedicated power outlet. Open the vendor door. Turn on the main power switch located on the Power Panel within the cabinet.

DOOR GLASS HEATER HARNESS CONNECTION

The Door Glass Heater Harness Connection is normally disconnected to conserve energy. In environments where the humidity is above 70% the Glass Heater Harness should be connected to prevent water condensation from forming on the glass surface. When the ambient conditions are below 70% humidity the glass should be disconnected. See above picture

SPIRAL ADJUSTEMENT

The shape, size and thickness of a product affect how well it falls off the tray. Most products can be vended successfully when the spiral end is positioned at 6 o'clock. If vending problems occur with spiral ends at the standard 6 o'clock position, adjust the drop-off either by retiming the spiral or installing a Product Pusher.

SPIRAL TIMING

SNACK/CANDY/FOOD TRAY

Each spiral can be rotated in 20° (degree) increments for a different drop-off point. Most products can be vended successfully when the spiral end is positioned at the position of 6 o'clock.

The general rule is:

The narrower the product, the higher the timing.

Thick Products - 4-6 o'clock

Most products - 6 o'clock

Thin Products - 6-8 o'clock

TO CHANGE SNACK/CANDY/FOOD SPIRAL TIMING:

1. Remove the motor cover.
2. Raise the motor slightly and pull forward on the spiral until it separates from the motor.
3. Rotate the spiral to the desired position and re-insert the hub (spiral coupling) into the motor. The hub must be seated over the vertical rail or retaining rib on the tray
4. Replace the motor cover, making sure it is securely tightened.
5. Test-vend to make sure product vends properly.



ADJUST SPIRAL END POSITION FOR SUCCESSFUL VEND.
MOST PRODUCTS VEND PROPERLY AT THE
6:00 (O'CLOCK) SETTING
SHOWN ABOVE

KEYPAD

Entries from the keypad will be displayed on the front vendor display.

Buttons 0-9 are used to move between the various modes, menus and sub-menus; while the button is used to enter a menu, confirm or save a setting.

DISPLAY

Check the display after pressing the **Service Mode Button** and/or **Keypad Buttons** to make sure that the program is responding correctly.



SERVICE MODE

Use the **Service Mode** to program and service the vendor. Use the keypad as an input device. Watch the display for information while in **Service Mode**.

SERVICE MODE BUTTON

To enter **Service Mode**, press the **Service Mode Button** located on the top or upper right corner of the controller cover. To exit **Service Mode**, press the **Service Mode Button**.

NOTE: If no key is pressed for approximately one minute while in **Service Mode**, the controller will automatically return to **Sales Mode**.

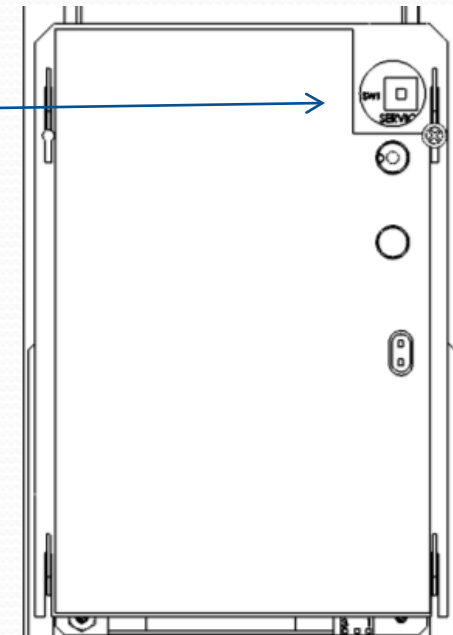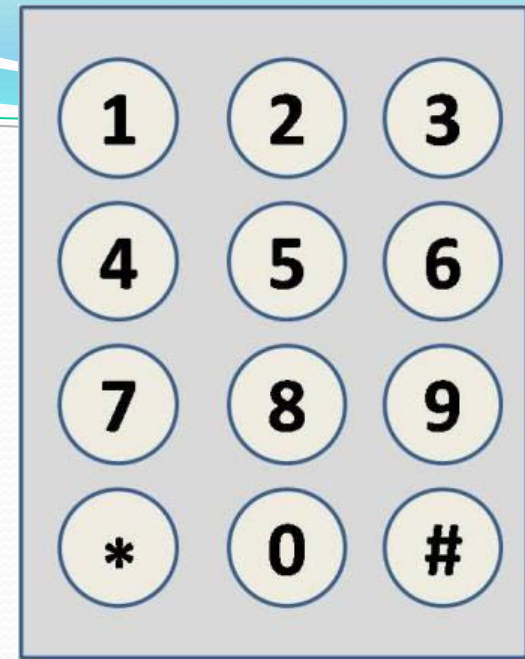


Loading Coin Mechanism

The Coin Mechanism must be loaded with some level of each coin in order for the vendor to operate properly. The coins need to be loaded into the coin mechanism by insertion into the front coin insert. First enter the SERVICE MODE then TUBE FILL MODE

Make sure to load the correct coins into their correct tubes. Each tube should be kept loaded with at least one roll of each coin to keep above the tube low level sensors. Once the tubes are loaded to these levels the Dollar Bill Validator will accept bills. If the coin tubes fall below this level the Dollar Bill Validator may stop accepting bills and the front display will indicate "EXACT CHANGE ONLY".

Alternatively, you can load the coins into the slots above the respective coin tubes. This is not the preferred method. By using TUBE FILL mode the control board can then accurately determine coin levels.

On some Coin Mechanisms there are buttons above each tube to dispense the coins (may vary depending on which coin mechanism that is used). The coins can also be dispensed within the Service Mode described later.

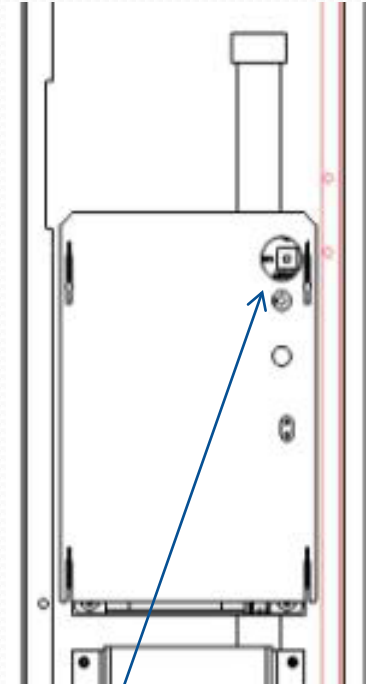

**PRESS SERVICE MODE BUTTON AND
ENTER TUBE FILL MODE (PRESS 1)**

#1 TUBE FILL

1 TUBE FILL/ DISPENSE COINS Tube Fill counts

coins as they are deposited and

Shows the dollar amount.

Tube Dispense

Pays out coins from the coin mech coin tubes.

This mode will also display the current quantity of coins in the coin mech tubes. **TUBE FILL**


STEP	DISPLAY
------	---------

1. Press Service Mode Button
Motor count 43
2. Press # 1 and begin depositing coins
At least 15 of each denomination
3. Press * 2 times to exit (Sales Mode)

TUBE DISPENSE

STEP	DISPLAY
------	---------

1. Press to dispense dollar coin
\$1.00/coins
2. Press to dispense quarters
0.25/coins
3. Press to dispense dimes
0.10/coins
4. Press to dispense nickels
0.05/coins
5. Press 2 times to exit (Sales Mode)

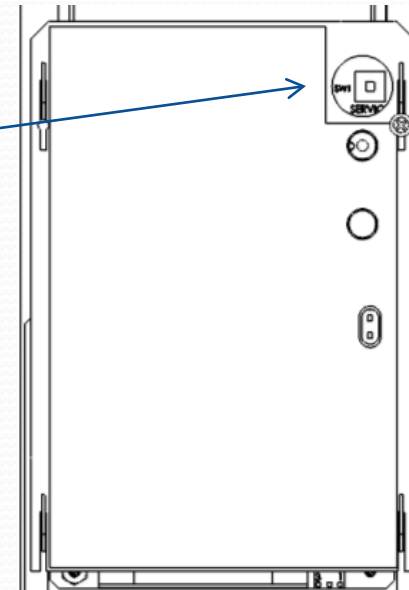

5 PRICING

Price Setting - This menu allows these methods for assigning prices:

ITEM — by individual selections

ROW— by shelf or tray

ALL ITEMS — by entire vendor.

COUPONS — by Item, Row, or ALL

TOKENS — by Item, Row, or ALL

COMBO

The maximum price that can be set is \$655.35.

PRICING BY ITEM

1. Press Service Mode Button - will display Motors (43)
2. Press 5 will display Pricing
3. Press 1 will display Item
4. Enter Item and price Item 010 \$0.50
5. Press # to save. The program will automatically go to the next selection number. Item 010 \$0.50
6. Press 3 times to exit. Will go back to (Sales Mode)

TEMPERATURE SETPOINT

We found that for bait vending it's best to raise the temperature set point up to 45 degrees.

Your Sportsman should be preset for bait at 45F from the factory. If not please follow the instructions below. If wish to change you vendor to a different temp, use the instructions below.

STEP DISPLAY

1. Press Service Mode Button Motors (43)
2. Press 3 this will display "Options"
3. Press 8 to view/change machine temperature set point 36F keep pressing 8 until you reach 45F
4. Press to save set point 36F
5. Press 2 times to exit Sales Mode

WHEN CHANGING THE TEMP SET POINT PLEASE MAKE SURE THE HEALTH SAFTY FUNCTION IS TURNED OFF, BOTH UPPER AND LOWER.

TURNING OFF THE HEALTH SAFTY FUNCTION

To shut off Health Safety (HS)

Service Mode Button - will read motor
count

Press 4

Then 9

Press 1 -upper zone then 3 turn off all items

Press 2 -lower zone then 3 turn off all items

Press # to save after each zone

Press Service Mode to EXIT

Turn off POS message

The POS message will read “are you hungry enjoy a snack”, this needs to be shut off when selling fishing bait.

Turn OFF (or ON) the default scrolling display message.

STEP DISPLAY

1. Press Service Mode Button Motors (43)
2. Press 3 Options
3. Press 7 POS Message ON
4. Press 7 to toggle ON or OFF.
POS Message OFF
5. Press # to save setting. POS Message OFF
6. Press *3 times to exit. (Sales Mode)

BEFORE CALLING FOR SERVICE

Please check the following:

Does your vending vendor have at least 6-inches of clear air space behind it?

If the power is turned on at the fuse box, is the vending vendor the only thing that doesn't work?

Is the vending vendor plugged directly into the outlet?

WARNING: Extension cords can cause problems.

DO NOT USE EXTENSION CORDS.

Is the evaporator coil free of dust and dirt?

Is the condenser coil free of dust and dirt?

Is the compressor free of dust? A blanket of dust can prevent the compressor from cooling in between workout cycles.

Is the circuit breaker at the fuse box reset?

Is the evaporator fan working? To check if the fan is running take a small piece of paper in front of the evaporator coil and see if the evaporator fan will draw the paper..

Is the condenser fan running? Fold a sheet of 8 1/2" x 11" paper in half. Place the paper in front of the condenser coil inlet screen located on the bottom right side underneath the cabinet and see if it draws the paper to it..

Is the shelf in front of the evaporator coil clear? (No tools, product, or other air-restricting items).

Is the temperature setting set as specified? See **CONTROL SYSTEM Programming Manual** .

NOTE: Setting the temperature colder does not accelerate cooling of product but may cause the product to freeze.

You can reach Gary Harsel of PA Live Bait Vending at any time if you have a problem with your Sportsman he can be reached at 610-942-2185 evenings & weekends call his cell at 484-885-4602 Call Gary first, there's a good chance he can solve your problem. If he can't the tech support team at Wittern is available on weekdays.

PARTS ORDERING PROCEDURE

When ordering parts, include the following:

1. The model and serial numbers of the vending vendor for which the parts are needed.
2. Shipping address.
3. Address where the invoice should be sent.
4. The number of parts required.
5. Always refer to the pertinent parts and/or part manual for the correct part number and description of a specific part.

NOTE: When RIGHT or LEFT is used with the name of a part, it means the person is facing the vending vendor with the door closed.

6. Any special shipping instructions.
7. Carrier desired: air or air special, truck, parcel post or rail.
8. Signature and date.
9. Purchase order number, if used.

Phone # is: 888-836-3638

Mail your order to:

VendNet™

165 North 10th Street

Waukee, IA 50263 USA

All orders are carefully packed and inspected prior to shipment. Damage incurred during shipment should be reported at once and a claim filed with the terminating carrier.

If you do not have the right parts manual: contact VendNet™.

If you have any questions, check out our Website www.vendnetusa.com or call VendNet. Ask for the Parts Department. We will be happy to assist you. Email: vendnet@vendnetusa.com

The banner features a blue and white background with a wavy top edge. On the left is a green circular icon with a yellow smartphone. In the center, the text "PA LIVE BAIT VENDING" is written in large, blue, 3D-style letters with a reflection effect. To the right of the text is a red and white fishing bobber icon. On the far right is a green circular icon with a yellow fish.

PA LIVE BAIT VENDING

We hope you found this program helpful. On behalf of PA Live Bait Vending and Vending.com we thank you for purchasing your Sportsman 24 Hour Bait Shop. The Sportsman is designed to give you years of reliable service. We will do our very best to help your business be a success.

