

LIVE BAIT VENDING.com



Setting up your 24 Hour Frozen & Dual Zone Bait Box



Understanding your new vendor

WELCOME

We thank you very much for purchasing your 24 Hour Bait Frozen & Dual Zone Bait Box

This quick start guide is a program that was put together to help you set up and get familiar with your new 24 Hour Bait Frozen & Dual Zone Bait Box. It in no way is this program to take the place of your service manual or the programming guide. Please take the time and read both the service manual and programming guide. Doing so will help you get the most from your new investment.



When your vendor arrives


Your new Frozen Bait Box was carefully crated at the factory to ensure that no damage occurs during transport. That being said, damage can still take place during transport. It is very important to carefully inspect the vendor before signing the shipping documents. If there is any damage make sure that the damage is noted on all copies of the shipping papers. Make sure the driver initials the papers as well. If there is serious damage do not sign the bills and call us right away, we may have you refuse the shipment.

Next you will need to remove the shipping boards from the bottom of the machine. You will see splits in the front and back of these boards. Take a crow bar and place the end of crow bar in the splits and the boards will split apart.

Opening your Frozen Bait Box

Your key will be taped in the coin return tray. Open door by turning key in lock and lifting lever after you turned the key. You also have a outer lock cover and lock included with you machine.

After opening the unit look inside the delivery bin remove all internal packing material and remove the power cord. Now go to the rear of the machine and remove the metal plate located at the back of the machine, your plug and cord will be behind this plate. Please note: This unit runs on 220 power. It runs on 220 volts to be more energy efficient. Make sure that is no other vending machine or ice machine on the circuit.

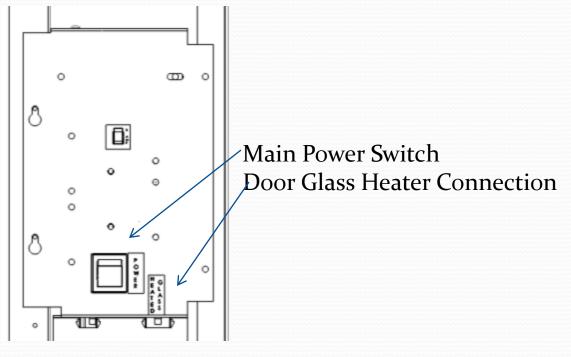

MAIN POWER SWITCH

Plug the power cord into a dedicated power outlet. Open the vendor door. Turn on the main power switch located on the Power Panel within the cabinet.

DOOR GLASS HEATER HARNESS CONNECTION

The Door Glass Heater Harness Connection is normally disconnected to conserve energy. In environments where the humidity is above 70% the Glass Heater Harness should be connected to prevent water condensation from forming on the glass surface. When the ambient conditions are below 70% humidity the glass should be disconnected. See above picture

SPIRAL ADJUSTEMENT

The shape, size and thickness of a product affect how well it falls off the tray. Most products can be vended successfully when the spiral end is positioned at 6 o'clock. If vending problems occur with spiral ends at the standard 6 o'clock position, adjust the drop-off either by retiming the spiral or installing a Product Pusher.

SPIRAL TIMING

SNACK/CANDY/FOOD TRAY

Each spiral can be rotated in 20° (degree) increments for a different dropoff point. Most products can be vended successfully when the spiral end is positioned at the position of 6 o'clock.

The general rule is:

The narrower the product, the higher the timing.

Thick Products - 4-6 o'clock Most products - 6 o'clock Thin Products - 6-8 o'clock ADJUST SPIRAL END POSITION FOR SUCCESFUL VEND.

MOST PRODUCTS VEND PROPERLY AT THE

6:00 (0'CLOCK) SETTING

SHOWN ABOVE



- 1. Remove the motor cover.
- 2. Raise the motor slightly and pull forward on the spiral until it separates from the motor.
- 3. Rotate the spiral to the desired position and re-insert the hub (spiral coupling) into the motor. The hub must be seated over the vertical rail or retaining rib on the tray
- 4. Replace the motor cover, making sure it is securely tightened.
- 5. Test-vend to make sure product vends properly.



KEYPAD

Entries from the keypad will be displayed on the front vendor display.

Buttons o-9 are used to move between the various modes, menus and sub-menus; while the button is used to enter a menu, confirm or save a setting.

DISPLAY


Check the display after pressing the **Service Mode Button and/or Keypad Buttons to make sure that the program is responding correctly. SERVICE MODE**


Use the Service Mode to program and service the vendor. Use the keypad as an input device. Watch the display for information while in Service Mode.

SERVICE MODE BUTTON

To enter Service Mode, press the Service Mode Button located on the top or upper right corner of the controller cover To exit Service Mode, press the Service Mode Button.

NOTE: If no key is pressed for approximately one minute while in Service Mode, the controller will automatically return to Sales Mode.

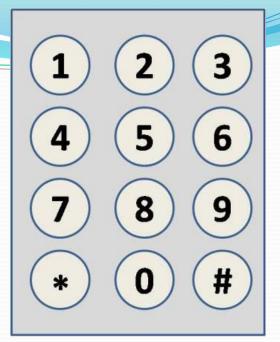

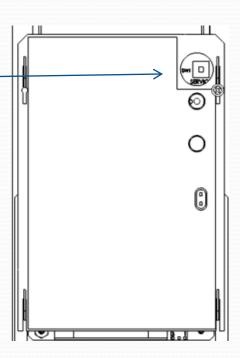


Loading Coin Mechanism

The Coin Mechanism must be loaded with some level of each coin in order for the vendor to operate properly. The coins need to be loaded into the coin mechanism by insertion into the front coin insert. First enter the SERVICE MODE then TUBE FILL MODE

Make sure to load the correct coins into their correct tubes. Each tube should be kept loaded with at least one roll of each coin to keep above the tube low level sensors. Once the tubes are loaded to these levels the Dollar Bill Validator will accept bills. If the coin tubes fall below this level the Dollar Bill Validator may stop accepting bills and the front display will indicate "EXACT CHANGE ONLY".

Alternatively, you can load the coins into the slots above the respective coin tubes. This is not the preferred method. By using TUBE FILL mode the control board can then accurately determine coin levels.

On some Coin Mechanisms there are buttons above each tube to dispense the coins (may vary depending on which coin mechanism that is used). The coins can also be dispensed within the Service Mode described later.

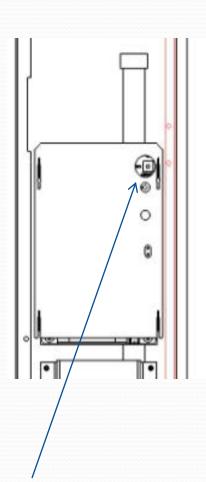

PRESS SERVICE MODE BUTTON AND ENTER TUBE FILL MODE (PRESS 1)

#1 TUBE FILL

1 TUBE FILL/ DISPENSE COINS Tube Fill counts coins as they are deposited and

Shows the dollar amount.

Tube Dispense

Pays out coins from the coin mech coin tubes.

This mode will also display the current quantity of coins in the coin mech tubes. **TUBE FILL**


STEP DISPLAY

- Press Service Mode Button Motor count
- 2. Press # 1 and begin depositing coins
 At least 15 of each denomination
- 3. Press * 2 times to exit (Sales Mode)

TUBE DISPENSE

STEP DISPLAY

- Press to dispense dollar coin
 \$1.00/coins
- Press to dispense quarters
 0.25/coins
- 3. Press to dispense dimes o.10/coins
- 4. Press to dispense nickels o.o5/coins
- 5. Press 2 times to exit (Sales Mode)

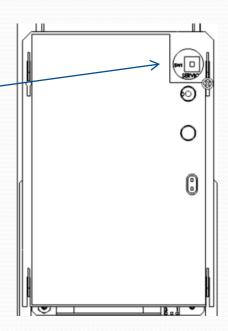

5 PRICING

Price Setting - This menu allows these methods for assigning prices:

ITEM — by individual selections ROW— by shelf or tray ALL ITEMS — by entire vendor. COUPONS — by Item, Row, or ALL TOKENS — by Item, Row, or ALL COMBO

The maximum price that can be set is \$655.35.

PRICING BY ITEM

- 1. Press Service Mode Button will display Motors
- 2. Press 5 will display Pricing
- 3. Press **1** will display Item
- 4. Enter Item and price Item 010 \$0.50
- 5. Press # to save. The program will automatically go to the next selection number. Item 010 \$0.50
- 6. Press 3 times to exit. Will go back to (Sales Mode)

BEFORE CALLING FOR SERVICE

Please check the following:

Does your vending vendor have at least 6-inches of clear air space behind it? If the power is turned on at the fuse box, is the vending vendor the only thing that doesn't work? Is the vending vendor plugged directly into the outlet?

WARNING: Extension cords can cause problems. DO NOT USE EXTENSION CORDS.

Is the evaporator coil free of dust and dirt?

Is the condenser coil free of dust and dirt?

Is the compressor free of dust? A blanket of dust can prevent the compressor from cooling in between workout cycles.

Is the circuit breaker at the fuse box reset?

Is the evaporator fan working? To check if the fan is running take a small piece of paper in front of the evaporator coil and see if the evaporator fan will draw the paper..

Is the condenser fan running? Fold a sheet of $8 \frac{1}{2}$ x 11" paper in half. Place the paper in front of the condenser coil inlet screen located on the bottom right side underneath the cabinet and see if it draws the paper to it..

Is the shelf in front of the evaporator coil clear? (No tools, product, or other air-restricting items). Is the temperature setting set as specified? See **CONTROL SYSTEM Programming Manual**.

You can reach Gary Harsel at Live Bait Vending.com at any time if you have a problem with your Vendor he can be reached at 610-942-2185 evenings & weekends call his cell at 484-885-4602 Call Gary first, there's a good chance he can solve your problem. If he can't the tech support team at Wittern is available on weekdays.

PARTS ORDERING PROCEDURE

When ordering parts, include the following:

- 1. The model and serial numbers of the vending vendor for which the parts are needed.
- 2. Shipping address.
- 3. Address where the invoice should be sent.
- 4. The number of parts required.
- 5. Always refer to the pertinent parts and/or part manual for the correct part number and description of a specific part.

NOTE: When RIGHT or LEFT is used with the name of a part, it means the person is facing the vending vendor with the door closed.

- 6. Any special shipping instructions.
- 7. Carrier desired: air or air special, truck, parcel post or rail.
- 8. Signature and date.
- 9. Purchase order number, if used.

Phone # is: 888-836-3638

Mail your order to:

VendNet™

165 North 10th Street

Waukee, IA 50263 USA

All orders are carefully packed and inspected prior to shipment. Damage incurred during shipment should be reported at once and a claim filed with the terminating carrier.

If you do not have the right parts manual: contact VendNet[™].

If you have any questions, check out our Website www.vendnetusa.com or call VendNet. Ask for the Parts Department. We will be happy to assist you. Email: vendnet@vendnetusa.com



LIVE BAIT VENDING.com



We hope you found this program helpful. On behalf of Live Bait Vending.com and All Brands Vending we thank you for purchasing your 24 Hour Frozen & Dual Zone Bait Box. This Vendor is designed to give you years of reliable service. We will do our very best to help your business be a success.

